

BioShield Application Guide


Setting Up a BioShield Canister



- First, remove the dust cap from the valve of the canister.
- Take the smaller end of the hose and attach it to the canister valve, be sure to tighten this with a spanner to prevent leaks.
- Take the larger end of the hose and attach it to the gun, tighten with a spanner.



- Turn on the canister at the valve, check all assemblies for leaks and tighten if necessary

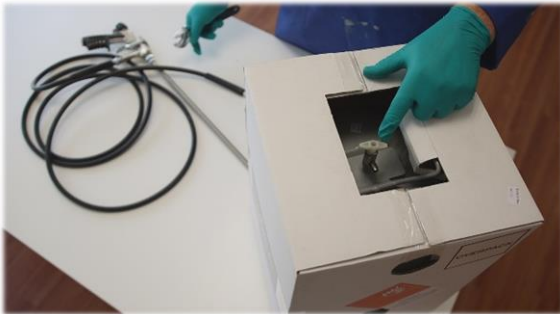

- Using a spanner, remove the spray tip from the gun
- Spray the canister into a waste container until a strong jet of sanitiser is achieved
- The tip should be removed to ensure that any potential debris in the hose/gun system that could cause blockages is removed

Equipment:

BioShield Canister
Hose
Spray Gun + Tip
Waste Container
Relevant PPE

- Reattach the spray tip and tighten with a spanner
- Using the trigger restrictor wheel on the gun, set the spray width to a suitable size
- For more information on canister care and application guides for all our products, visit our website



All the information in this application guide is based on practical experience and is published in good faith. However, because we have no control over the manner or conditions in which our products are used, over work undertaken or product manufactured by the purchaser, we cannot accept liability for results. Responsibility for ascertaining the suitability of products for his purpose rests with the purchaser. All conditions, representations, statements, warranties or guarantees whatsoever, whether express, implied or statutory, in respect of any goods manufactured, sold or supplied by us are hereby expressly excluded and we accept no liability in respect of any claim for damage or consequential loss caused to any property arising directly or indirectly out of the use of our products or goods.



www.bioshieldonline.com